



B-EYE LED Beam move light. User Instruction



Display menu functions:

Address Set	001-512	DMX 512 address setting
Channel Set	16CH	Select 16 channel
	DMX Mode	DMX 512 control mode
Show Mode	Fast Mode	Quick running mode
	Slow mode	Slow running mode
	Sound Mode	Sound control sensitivity adjustment

DMX control, 16CH function:

Sound Sense	0-99	Voice control operation mode
Pan Inverse	OFF ON	X motor is forward rotation X motor reverse rotation
Tilt Inverse	OFF ON	Y motor forward rotation Y motor reverse rotation
Default confirm	YES	The system reset
Fixture Rest	YES	The system reset
CH	function	instruction
1	X motor rotation	0-255
2	X motor fine-tuning	0-255
3	Y motor rotation	0-255
4	Y motor fine-tuning	0-255
5	X Y motor speed	0-255
6	Z motor	0-127: Rotation 128-191: Forward rotation 192-255: Reverse rotation
7	main dimming	0-255
8	R <i>dimming</i>	0-255 Red brightness adjustment
9	G	0-255 Green brightness adjustment
10	B	0-255 Blue brightness adjustment
11	W	0-255 White brightness adjustment
12	strobe	0-255, from slow to fast
13	0-10 11-127 128-160 161-200 201-255	Other channel function work Colors combination change Colors jump change Colors gradient change 1 Colors gradient change 2
14	speed adjustment	0-255
15	reset	0-255
16	Laser reset	0-255